



GENERAL NOTES:


1. Place cuttings perpendicular to slope.
2. See plans for spacing between rows.
3. Branches/cuttings to protrude from slope approximately $\frac{1}{4}$ of its length max.
4. See Plant Material List for species and length.

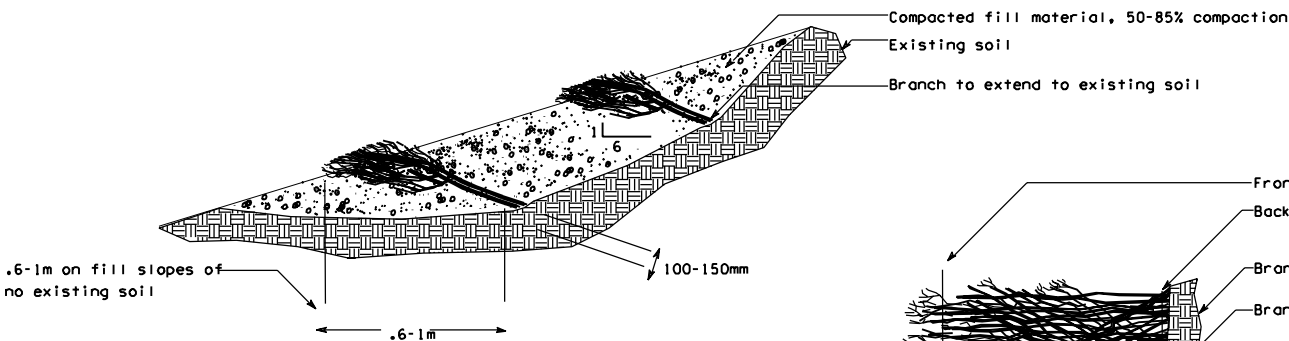

BRUSHLAYER ON FILL SLOPE

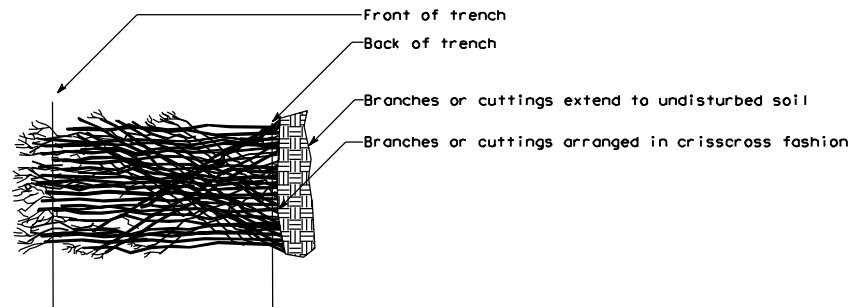

BRUSHLAYER ON FILL SLOPE
PLAN VIEW

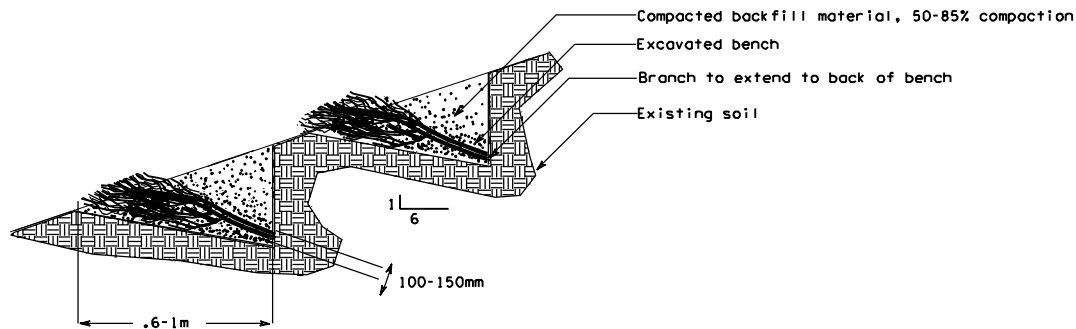

BRUSHLAYER ON CUT SLOPE

ALL DIMENSIONS ARE IN MILLIMETERS
UNLESS OTHERWISE NOTED.

BIOENGINEERING BRUSHLAYER DETAILS Not To Scale

STANDARD PLAN

APPROVED FOR PUBLICATION

STATE DESIGN LANDSCAPE ARCHITECT DATE
WASHINGTON STATE DEPARTMENT OF TRANSPORTATION
OLYMPIA, WASHINGTON
Sheet X of X Sheets